


**ALL PVC
Retractable**

Features

- SAF·T·FLO All PVC Retractable Injection Quills are optimal for injecting highly corrosive chemical solutions 1/3 to 1/2 the diameter of a pressurized main or process pipe.
- Units are lightweight, durable, and easy to operate.
- Ball valve, solution tube adapter, and packing nut are standard CPVC. Solution tube and check valve can be either PVC or CPVC.
- Retractable feature allows operators to safely remove and insert the solution tube while under pressure. Insertion lengths shall not exceed 6".

ALL PVC
Retractable

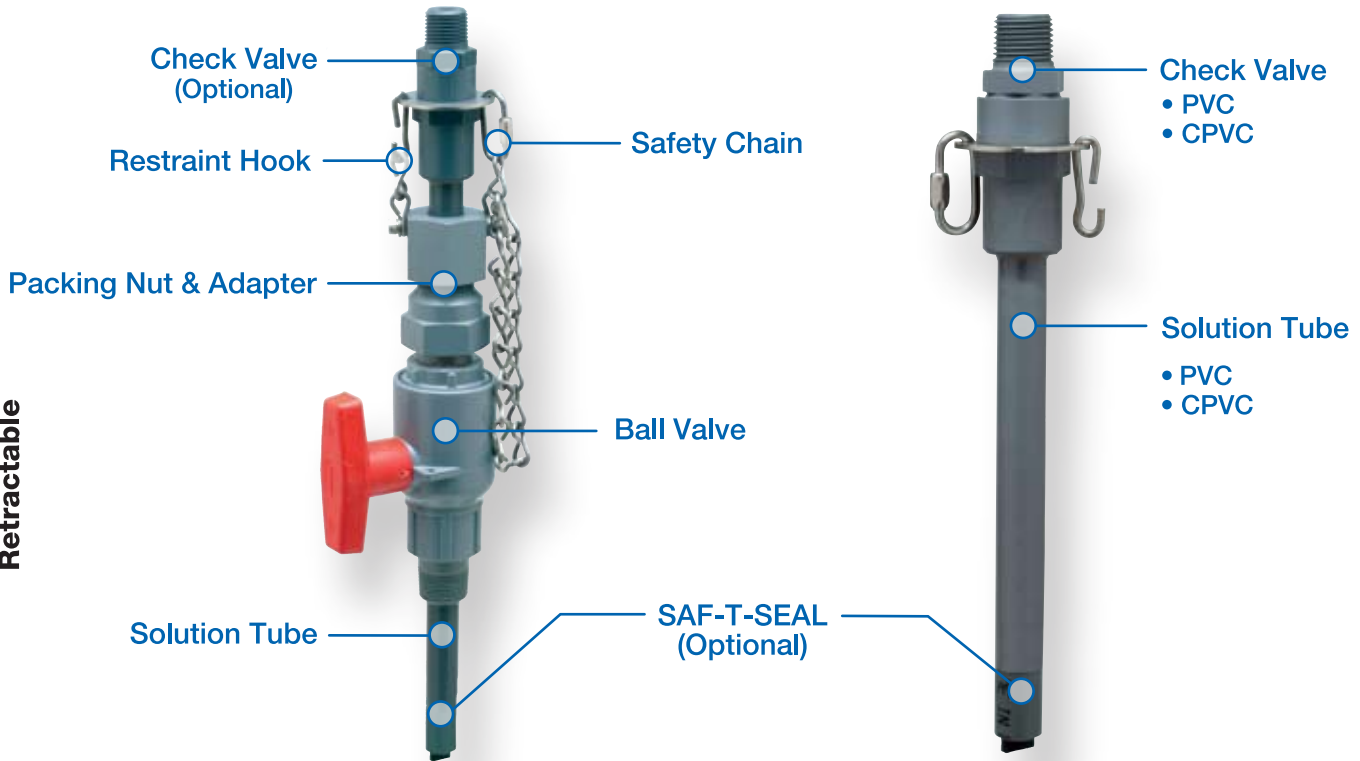

| Main Connection Size | Material of Construction | Solution Tube Diameter | Max. Length | Check Valve Available | Saf-T-Seal Tip Available | Quick Release Coupling | Base Model Number |
|----------------------|--------------------------|------------------------|-------------|-----------------------|--------------------------|------------------------|-------------------|
| 3/4" NPT | CPVC | 3/8" | 6" | Standard | Yes | n/a | EB-162 |
| 3/4" NPT | CPVC | 3/8" | 6" | Standard | Yes | Standard | EB-163 |
| 1" NPT | CPVC | 1/2" | 6" | Standard | Yes | n/a | EB-164 |
| 1-1/2" NPT | CPVC | 1" | 10" | Standard | n/a | n/a | EB-165 |

Standard unit includes; CPVC ball valve, PVC solution tube (6") with plain tip, spring loaded ball check valve, stainless steel limit chain, and stainless steel restraint system. (Spring loaded ball check valve not available on EB-165)

Features

- CPVC Ball Valve
- Stainless Steel Restraint Hook
- Preset Stainless Steel Limit Chain
- Tip Configuration
 1. Plain Tip
 2. Bevel Tip with Alignment Arrow
 3. SAF-T-SEAL
- Check Valve (Optional)

Maintenance

- Periodically remove solution tube to check for internal or exterior chemical build-up
- Apply grease to the compression o-ring
- Re-apply Anti-Seize to Adapter/Packing Nut threads

Other Saf-T-Flo Models

- 250 psi. rated Retractable Injection Quills
- Non-Retractable Injection Quills
- Retractable Flanged Injectors
- Chemical Injection Spools
- Sampling Probes



Please contact our Asia Pacific distributor:

H2O Rx

Phone: 0409 784 236 or 0421 795 353

info@h2orx.com.au

www.h2orx.com.au